



# ATI-5010W

**Liquid Leak Sensor**

---

## INSTRUCTIONS

**Installation and Maintenance of the  
ATI-5010W Interstitial Liquid Leak Sensor  
for Tank Wells & Riser Pipes**

### IMPORTANT

**Please read these installation and operating instructions completely and carefully before starting. Failure to do so will void warranty.**

filename:  
ATI.MAN.5010W\_liquid leak sensor

Revised, 10/17/2007  
Copyright © ATI, January 2006

---

**A.T.Monitors**, a division of Armstrong Technologies Inc.  
14 Birch Drive, Kemptville, Ontario, K0G 1J0, CANADA  
Tel: 613-258-5225 • Fax: 613-258-2698  
E-mail: [info@atmonitors.com](mailto:info@atmonitors.com) • Internet: [atmonitors.com](http://atmonitors.com)

# TABLE OF CONTENTS

Section Title	Page
<b>1 - WARRANTY</b> .....	<b>1</b>
1.1 - LIABILITY .....	1
1.2 - MODIFICATIONS AND SUBSTITUTIONS .....	1
1.3 - PRODUCT RETURN .....	1
<b>2 - PRODUCT INFORMATION</b> .....	<b>2</b>
2.1 - INTERSTITIAL LIQUID LEAK SENSOR.....	2
<b>3 - PRODUCT DESCRIPTION</b> .....	<b>3</b>
3.1 - GENERAL DESCRIPTION.....	3
3.1.1 - SENSOR SPECIFICATIONS.....	3
3.2 - APPLICATIONS.....	3
<b>4 - INSTALLATION</b> .....	<b>4</b>
4.1 - LOCATION AND MOUNTING.....	4
4.1.1 - DOUBLE-WALL TANKS.....	4
4.2- WIRING TO MONITORS.....	4
<b>5 - PREVENTIVE MAINTENANCE</b> .....	<b>6</b>
5.1 - SENSOR VERIFICATION.....	6
5.2 - TROUBLESHOOTING.....	6
5.2.1 - LIQUID SENSOR DATA.....	6

## **1 - WARRANTY**

The ATI-5010W Liquid Leak Sensor is warranted against defects in material and workmanship for a period of one (1) year from date of shipment. During the warranty period, *Armstrong Technologies Inc. (ATI)* will repair or replace components that prove to be defective in the opinion of ATI. ATI is not liable for auxiliary interfaced equipment, or consequential damage. This warranty shall not apply to any product, which has been modified in any way, which has been repaired by any other party other than a qualified technician or authorized ATI representative, or when such failure is due to misuse or conditions of use.

### **1.1 - LIABILITY**

All ATI products must be installed and maintained according to instructions. Only qualified technicians should install and maintain the equipment. ATI shall have no liability arising from auxiliary interfaced equipment, for consequential damage, or the installation and operation of this equipment. ATI shall have no liability for labour or freight costs, or any other costs or charges in excess of the amount of the invoice for the products.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, AND SPECIFICALLY THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THERE ARE NO WARRANTIES THAT EXTEND BEYOND THE DESCRIPTION ON THE FACE THEREOF.

### **1.2 - MODIFICATIONS AND SUBSTITUTIONS**

Due to an ongoing development program, ATI reserves the right to substitute components and change specifications at any time without incurring any obligations.

### **1.3 - PRODUCT RETURN**

All products returned for warranty service will be by prepaid freight and they will only be accepted with an R.G.A. number issued by ATI. All products returned to the client will be freight collect.

### **WARNING**

<p><b>USING ELECTRICALLY OPERATED EQUIPMENT NEAR GASOLINE OR OTHER COMBUSTIBLE VAPOURS MAY RESULT IN FIRE OR EXPLOSION, CAUSING PERSONAL INJURY AND PROPERTY DAMAGE. CHECK TO ASSURE THE WORKING AREA IS FREE FROM SUCH HAZARDS DURING INSTALLATION OR WHEN PERFORMING MAINTENANCE, AND USE PROPER PRECAUTIONS.</b></p>
---

## 2 - PRODUCT INFORMATION

**NOTE:** This page must be filled-in at site by client, contractor or installer.

### 2.1 - INTERSTITIAL LIQUID LEAK SENSOR

Sensor Part Number .....	_____
Sensor Serial Number .....	_____
Sensor Warranty Period .....	1 year
Operating Temperature .....	Water: 0 to +60°C (+32 to +140°F) Petrol.: -40 to +60°C (-40 to +140°F)
Operating Pressure .....	Ambient atmospheric pressure
<b>Electrical Rating</b> (maximum) .....	80 mA @ 120 VAC, 60 Hz, resistive 40 mA @ 240 VAC, 60 Hz, resistive 1 A @ 24 VDC, resistive

**Note:**

**All *Armstrong Technologies Inc.* products must be installed and maintained according to instructions, to ensure proper operation. Only qualified technicians should install and maintain the equipment.**

### 3 - PRODUCT DESCRIPTION

#### 3.1 - GENERAL DESCRIPTION

The ATI-5010W Interstitial Liquid Leak Sensor is designed as a leak detection device for the interstitial space of double-wall storage tanks. It is usually installed in the riser pipe or well. The principle of operation of the sensor is simple, when a leak causes any liquid to accumulate in the bottom of the interstitial space, the sensor will activate an alarm. The unique design allows for flexibility of installation and immediate alarm response.

The ATI-5010W Interstitial Liquid Leak Sensor features:

- ◆ Reusability
- ◆ Instant response
- ◆ Intrinsically safe (when connected through an approved I.S. barrier, or to an ATI liquid monitor).
- ◆ Ease of installation

#### 3.1.1 - SENSOR SPECIFICATIONS


MONITORED LIQUIDS	Water, gasoline, diesel, waste oil and other petroleum products (contact factory for more information if required).
SENSOR	Magnetically activated float switch
INSTALLATION WIRING	Intrinsically safe, 2-conductor, type THWN cable
RESPONSE TIME	Instantaneous for any liquid
REPEATABILITY	Excellent even after repeated immersions without adjustment
OPERATING TEMPERATURE	Water: 0 to +60 °C (+32 to +140 °F) Petroleum: -40 to +60 °C (-40 to +140 °F)
STORAGE	10 YEARS @ -65 to +60 °C (-85 to +140 °F)

#### 3.2 - APPLICATIONS

See installation section for more details.

APPLICATION	TYPE	MONITORING LOCATION	MONITORED PRODUCT
Underground Storage Tanks	Steel/F.R.P. double-wall tanks	In bottom of interstitial space riser pipe of tank	Leaks of water or petroleum products
Aboveground Storage Tanks			



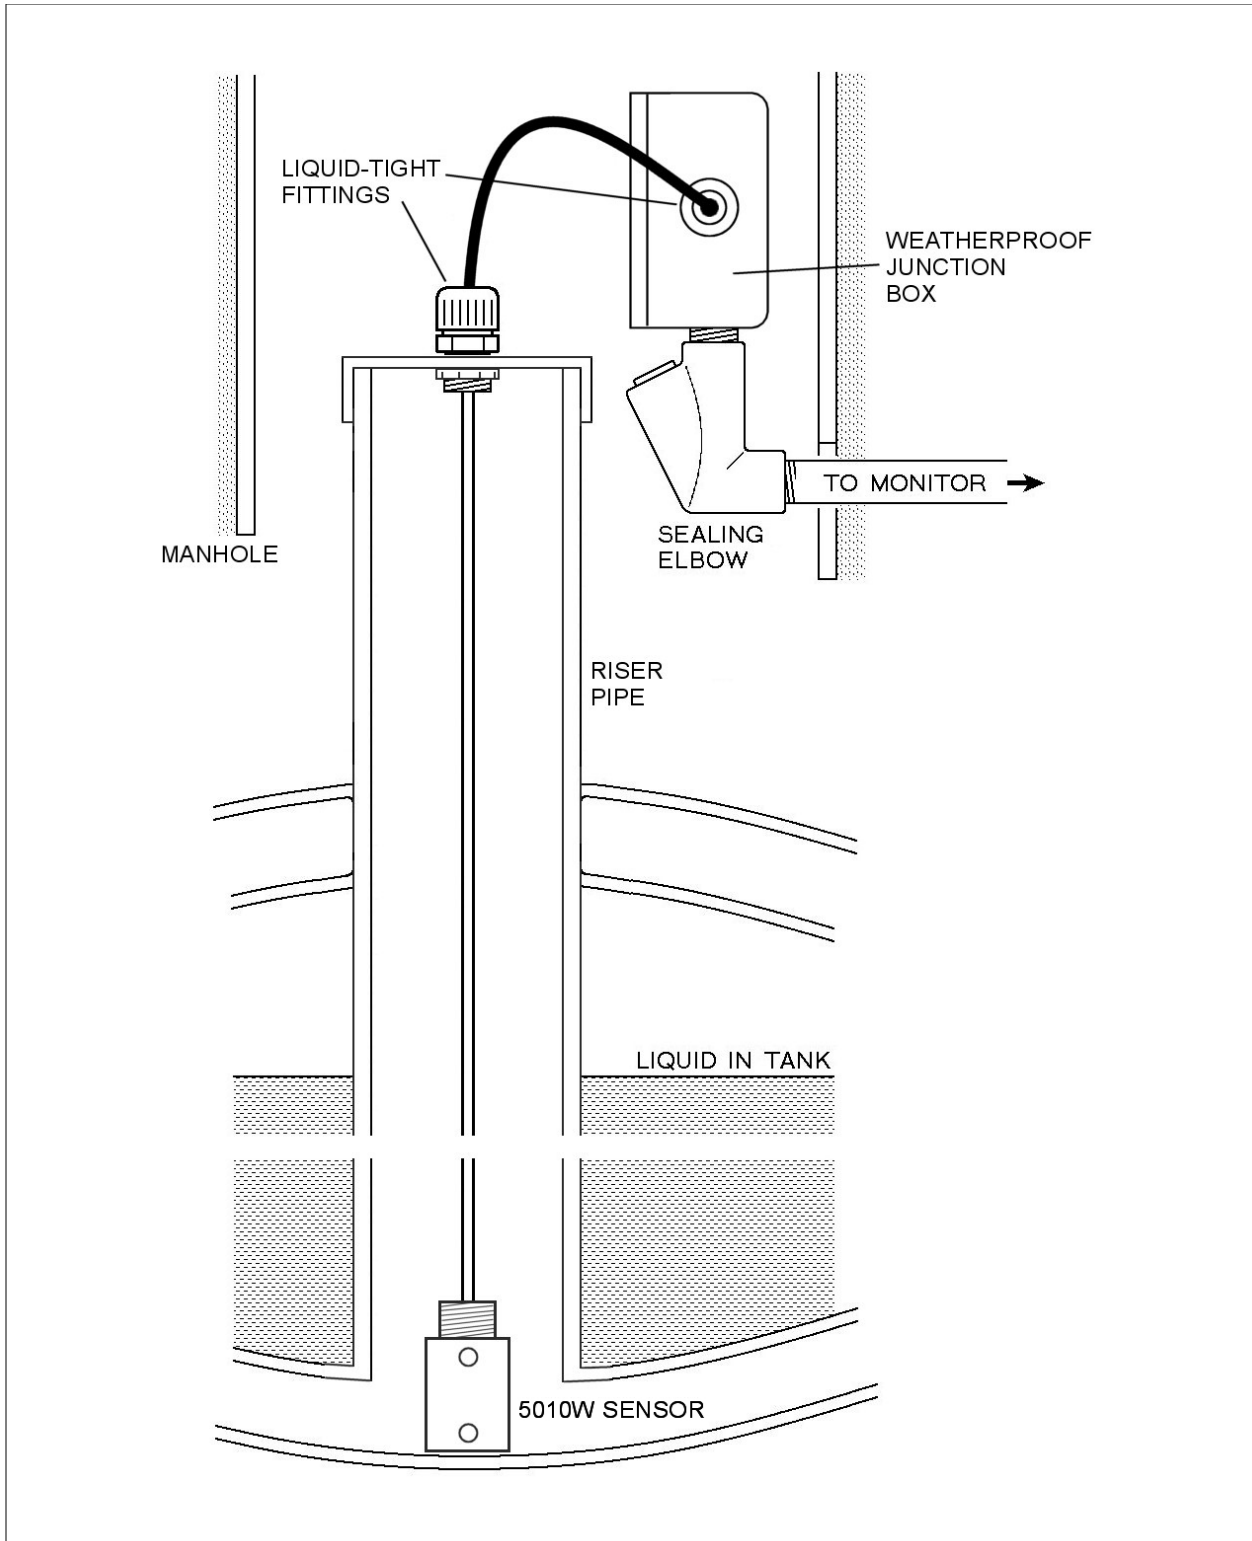

**FIGURE 1: Installation of sensor in tank riser pipe.**

## 5 - PREVENTIVE MAINTENANCE

### 5.1 - SENSOR VERIFICATION

For verifying the liquid leak sensor, connect a digital multimeter (set for resistance) to the pair of wires (BLACK/RED). The resistance should read as an open circuit. Next, invert the sensor housing and observe the reading — it should drop to a very low resistance, typically less than 100 ohms.

**MAKE SURE TO VERIFY THE INTEGRITY OF EACH SENSOR DURING INSTALLATION.**

### 5.2 - TROUBLESHOOTING

If any unusual multimeter readings are obtained (other than those described in the Sensor Verification section), some wires may be shorted or the sensor may have been damaged during installation. **Remember to use caution when installing each ATI-5010W Interstitial Liquid Leak Sensor.**

When verifying each sensor with a digital multimeter, make sure the readings obtained agree with the following sensor data.

#### 5.2.1 - LIQUID SENSOR DATA

	STANDARD	OPTIONAL
Normal Status (no leak):	Circuit open (N/O)	Circuit closed (N/C) Low resistance < 100 Ohms
Alarm ON status (leak):	Circuit closed (N/C) Low resistance < 100 Ohms	Circuit open (N/O)